



INSTALLATION INSTRUCTIONS

Part Number: DU-8015

This filter fits: SEE CATALOG FOR CURRENT APPLICATIONS

* FREE K&N® decal To register your warranty, please see us online at knfilters.com/register. FREE K&N® decal *

Congratulations, you have purchased the finest air filter that money can buy. With proper care, this filter can last many seasons. This filter can be used in a stock machine, with no modifications required. If any engine modifications have been made tuning/jetting adjustments may be required. There are special installation instructions, so please follow the procedures outlined below to ensure the K&N® air filter seals properly.

If you need any assistance please call 1-800-858-3333 to speak with a representative in our Customer Service Center before returning the product.

INSTALLATION:

1. Remove the stock air filter from the air box.
2. Clean all the sealing surfaces in the air box.
3. Position the K&N® Air Filter on the air box lid as shown on figure 1 with the arrows on the filter base pointing up as shown on figure 2.
4. Slide the top of the K&N® Filter into the lid retention feature and press the filter base down into the lid sealing wall. Fig 3, Fig 4 **NOTE: The lids sealing wall must sit in the filters channel completely.**

THESE INSTRUCTIONS MUST BE FOLLOWED EVERY TIME THE FILTER IS SERVICED, OTHERWISE THE FILTER MAY NOT SEAL, AND DAMAGE TO THE ENGINE COULD RESULT.

Fig 1

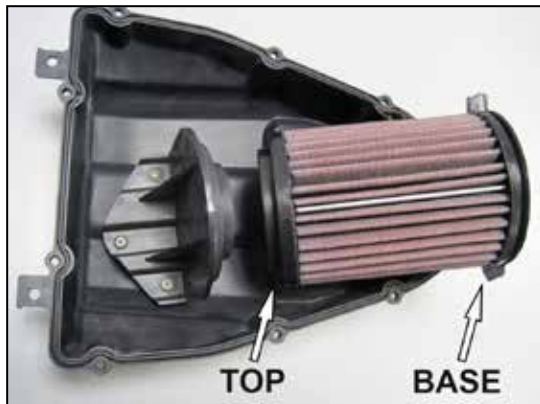


Fig 2



Fig 3



Fig 4



CLEANING:

K&N Engineering, Inc., suggests checking the air filter element periodically for excessive dirt build-up. Depending on your driving conditions, we recommend cleaning your air filter every 50,000 miles. To clean and re-oil, purchase our filter Recharger® service kit, part number 99-5050 or 99-5000 and follow the easy instructions.