



Part Number 57-0336 INSTALLATION INSTRUCTIONS

Citroen Saxo VTR 1.6L 8v (Square air box) 2000-2003 (2 lambda sensors)

1. Unclip the cam cover breather hose from the air box. (Fig. 1)
2. Carefully remove the breather hose from the cam cover "T" piece. (Fig. 2)
3. Unbolt & carefully remove the resonator box from the air box intake pipe. (Fig. 3)
4. Carefully unclip and remove the complete air box assembly. (Fig. 4)
5. Fit the new rubber intake hose onto the throttle housing and secure using the #40 hose clip supplied. (Fig. 5)
6. Fit the metal tube up to the lip in the filter base and secure using the #44 hose clip supplied.
7. Attach the filtercharger assembly onto the rubber intake hose and firmly tighten using the #40 hose clip supplied. (Fig. 6)
8. Fit the large end of the plastic adaptor into the straight end of the rubber breather hose supplied. (Fig. 7)
9. Insert the small end of the plastic adaptor in to the new rubber intake hose. Attach the hose onto the cam cover "T" piece and secure using the #12 hose clip supplied. (Fig. 8)
10. Carefully expand the cold air hose, fit one end into the rubber intake scoop and secure using the #44 hose clip supplied.
11. Attach the 2 rubber bobbins to the two holes in the rubber scoop using the nylock nuts & flat washers supplied.
12. Taking all of the necessary safety precautions as per the manufacturers instructions, raise the front of the car. Drill 2 x 6mm holes in the lower under tray and mount the front of the rubber scoop using the flat washers and nylock nuts supplied, feed the cold air hose up the front of the gearbox towards the filtercharger. (Fig. 9)
13. Secure the rear of the rubber scoop using one of the plastic ties supplied. (Fig. 10)
14. Position the flexi cold air hose to finish approximately 4" / 10cm away from the filtercharger and secure to the resonator box mounting bracket using the plastic ties supplied. (Fig. 11)
15. Carry out a final check height / alignment of the K&N induction kit, kit installation is now complete.

Parts list:

- 1 x Air filter Element.
- 1 x Cold Air hose Assembly.
- 1 x Rubber Scoop.
- 1 x Rubber Breather Hose.
- 1 x Literature Pack.
- 1 x Fixing Kit :-
 - 1 x Metal Tube.
 - 2 x M6 Rubber Bobbins.
 - 4 x Flat Metal Washers.
 - 4 x M6 Nylock Nuts.
 - 3 x Plastic Ties.
 - 1 x #12 Hose Clip.
 - 2 x #40 Hose clip.
 - 2 x #44 Hose clip.
 - 1 x Stepped Plastic Adaptor.
 - 1 x Rubber Intake Hose.

WARNING: Before starting the engine carry out a final fitment check of the K&N performance kit. It will be necessary for all intake systems to be checked periodically for realignment, clearance and tightening of all connections. Failure to follow the above instructions or proper maintenance may void the warranty.

FILTER MAINTENANCE: K&N suggests checking the filter periodically for excessive dirt build-up. When the element becomes covered in dirt (or once a year), service it according to the instructions on the Recharger service kit available from your K&N dealer, part number 99- 5003EU.

For cleaning instructions please visit our website: www.knfilters.com/cleaning



Fig. # 1



Fig. # 2



Fig. # 3



Fig. # 4



Fig. # 5



Fig. # 6



Fig. # 7

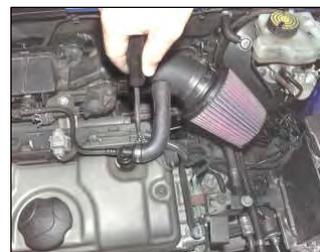


Fig. # 8



Fig. # 9



Fig. # 10



Fig. # 11