

Part Number 57-0365 INSTALLATION INSTRUCTIONS

VW POLO 1.6L 16V L4 1998-2001 (Type 6N exc 75bhp)

1. Remove the 4 bolts securing the plastic engine cover, carefully remove the cover from the vehicle. (Fig. 1)
2. Unclip & remove the intake pipe from the pick-up pipe assembly, if preferred the pick-up pipe can also be removed. (Fig. 2)
3. Unclip & remove the breather hose from the side of the air box. (Fig. 3)
4. Carefully unclip & remove the plastic cover on the air box lid, remove the exposed bolt. (Fig. 4)
5. Remove the bolt securing the front of the air box to the engine. (Fig. 5)
6. Carefully pull the air box out of its securing grommets & remove the air box assembly from the vehicle. (Fig. 6)
7. Join the engine breather hose to the new breather hose using the stepped adapter supplied. Fit the angled hose adapter to the end of the new breather hose. Secure the adapters using the #10 & #6 hose clips supplied. (Fig. 7)
8. Install the new Air filter element onto the throttle housing using the #40 clip supplied, ensuring that the K&N logo on the lid is straight. (Fig. 8)
9. Insert the angled breather adapter into the hole in the base of the Air filter. Secure the hose to the injector rail using the plastic ties supplied. (Fig. 9)
10. Taking all necessary safety precautions as per manufacturers instructions raise the front of the vehicle. Carefully cut a 7x7cm hole in the undertray as shown (It is possible to remove the undertray if required). Attach the end of the flexi cold air hose to the undertray using a plastic tie supplied, feed the flexi hose up into the engine compartment. (Fig.10)
11. Feed the flexi hose up to finish approx. 10cm / 4" away from the Air filter, secure the flexi hose using the plastic ties supplied. (Fig.11)
12. Carry out a final check of the alignment/fitment of the K&N induction system, ensuring that all clips etc are tight before starting the engine.
13. Installation is now complete.

Parts list:

- 1 x Air filter element.
- 1 x #40 Hose Clip.
- 1 x Breather Hose.
- 1 x Flexi Cold Air Hose.
- 1 x Fixing Kit :-
 - 1 x Stepped Adapter.
 - 1 x Angled Adapter.
 - 5 x Plastic Ties.
 - 1 x #10 Hose Clip.
 - 2 x #6 Hose Clip.

WARNING: Before starting the engine carry out a final fitment check of the K&N performance kit. It will be necessary for all intake systems to be checked periodically for realignment, clearance and tightening of all connections. Failure to follow the above instructions or proper maintenance may void the warranty.

FILTER MAINTENANCE: K&N suggests checking the filter periodically for excessive dirt build-up. When the element becomes covered in dirt (or once a year), service it according to the instructions on the Recharger service kit available from your K&N dealer, part number 99- 5003EU.

For cleaning instructions please visit our website: www.knfilters.com/cleaning



Fig. # 1



Fig. # 2



Fig. # 3



Fig. # 4



Fig. # 5



Fig. # 6



Fig. # 7



Fig. # 8



Fig. # 9

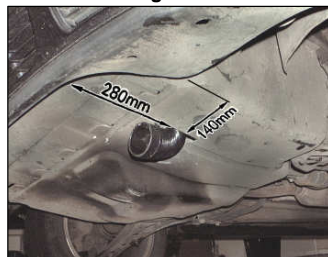


Fig. # 10



Fig. # 11